


VOLKSWAGEN T6 PK441

Intake Instructions



Parts List

x1 HEAT SHIELD

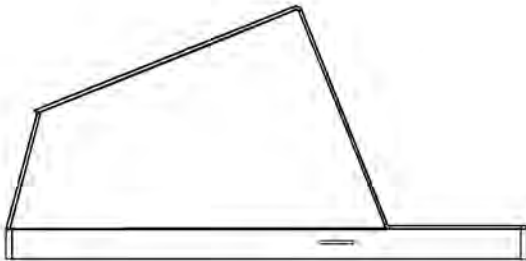

x1 FILTER



x1 80 mm - 100 mm
JUBILEE CLIP



x2 M6 CAPHEAD
SCREWS



x2 M6 NYLOCK
NUTS



STEP 1

Press down clips & pull to remove both sensors



STEP 2



STEP 3

Loosen jubilee clip and pull away outlet hose



STEP 4

Unclip front & back side of airbox



STEP 5

Remove airbox lid & panel filter from base



STEP 6

Remove screws from MAF housing & detach from lid



STEP 7

Remove O-ring from MAF housing & replace into airbox lid



STEP 8

Using supplied nuts & bolts, mount MAF housing to heatshield



STEP 9

Place filter with jubilee clip onto MAF housing inside the heatshield



STEP 10

Tighten jubilee around filter neck



STEP 11

Place heatshield into airbox base and clip down over the tabs



STEP 12

Press the outlet hose back over the MAF housing



STEP 13

Tighten jubilee around outlet hose



STEP 14

Replug both sensors



Now you are ready
to go!

