



HONDA CIVIC
FL5 TYPE R
PK444

Intake Instructions

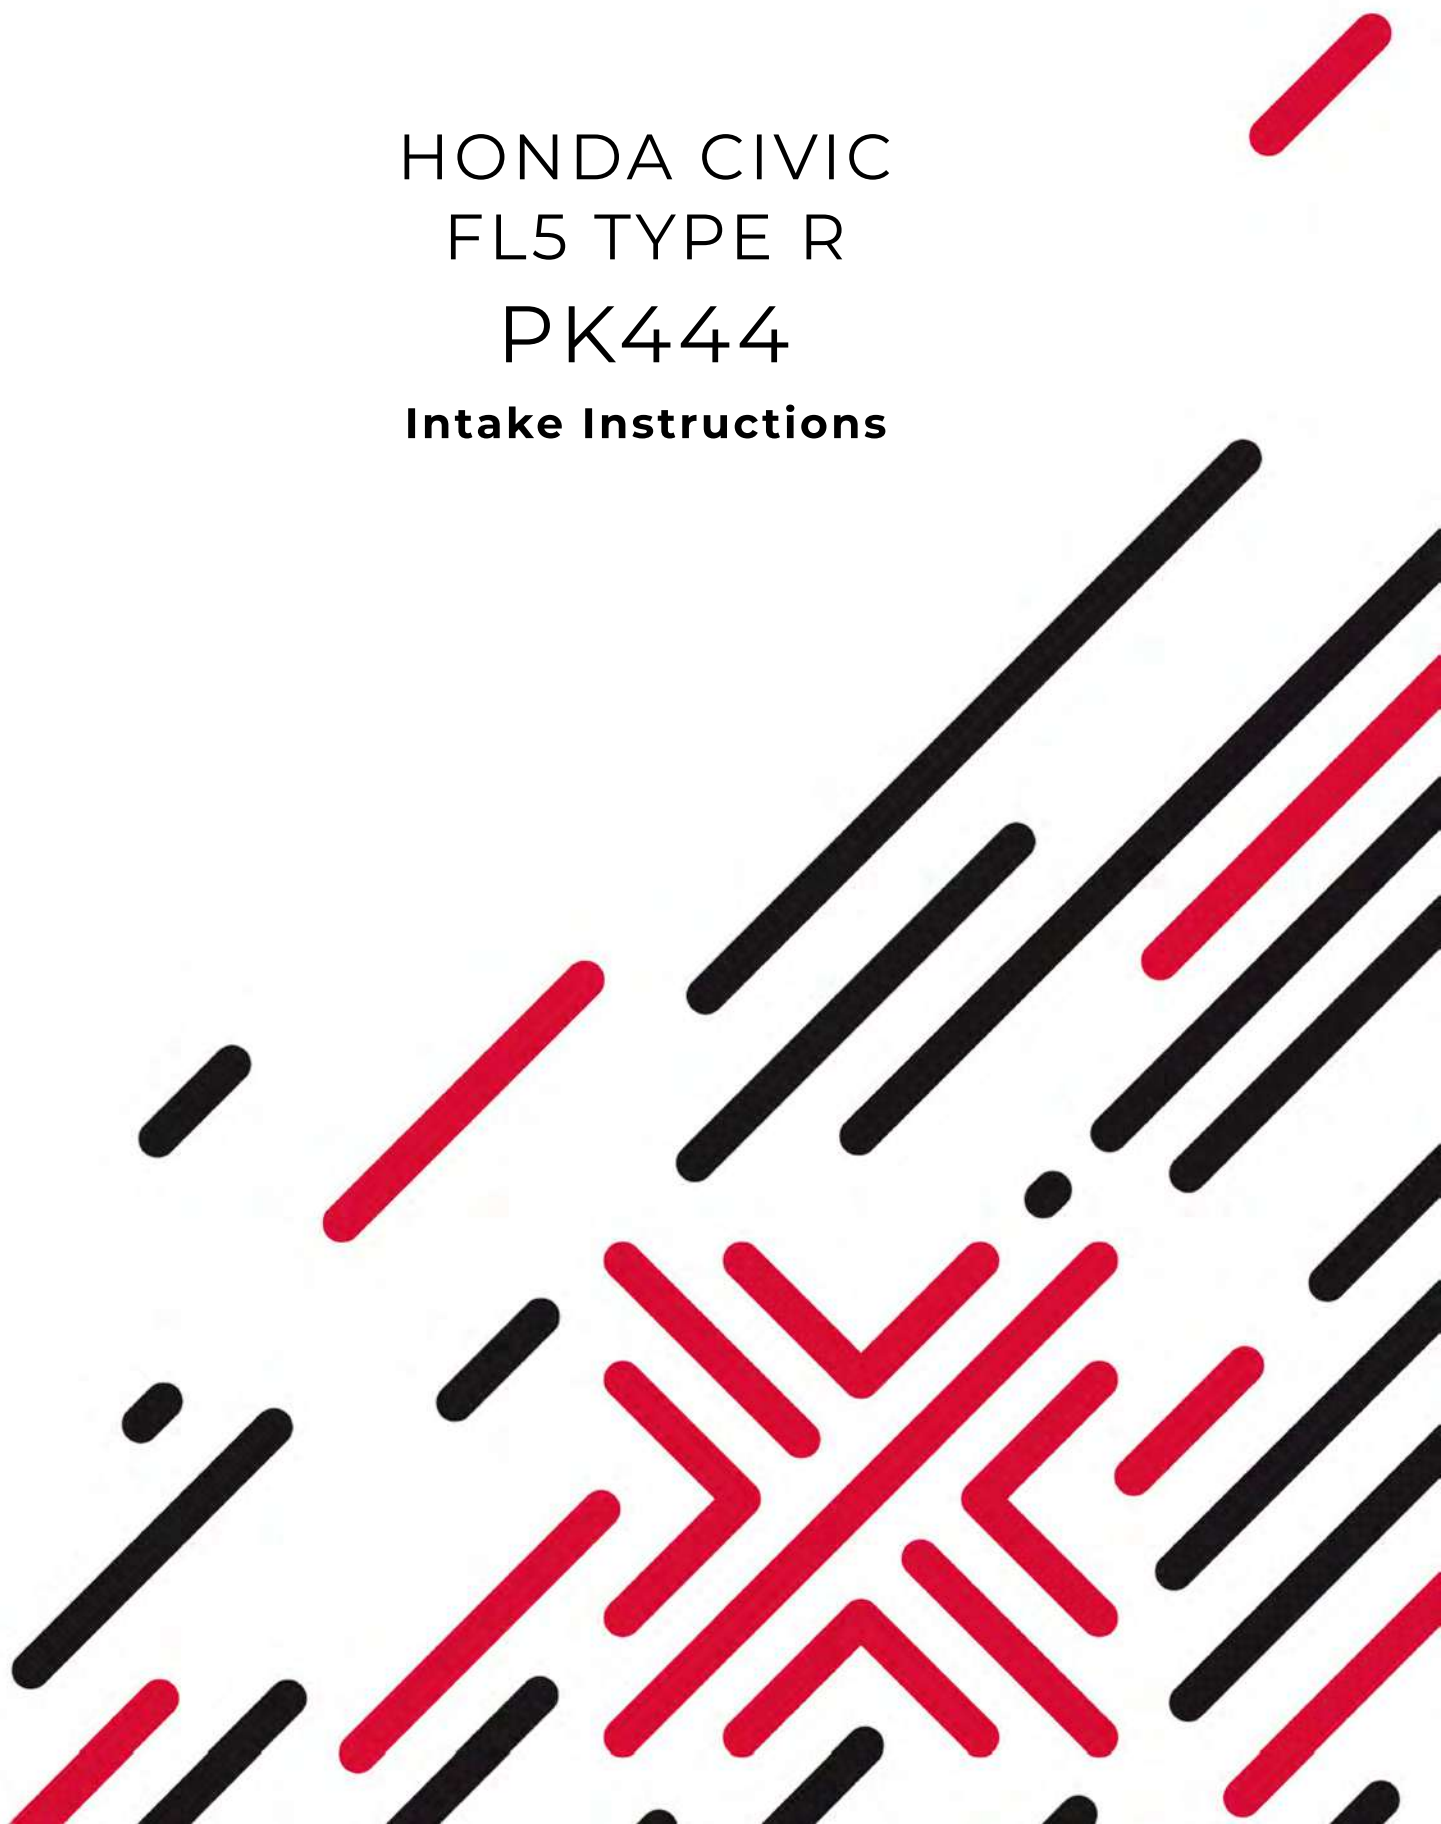

PARTS LIST

x1 HEAT SHIELD

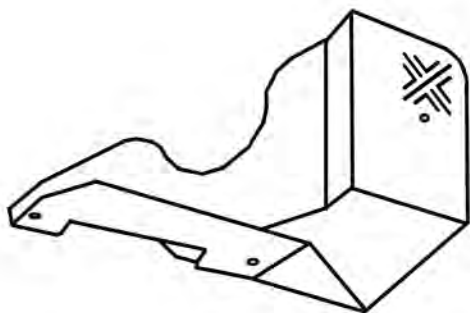


x1 FILTER




x1 HEATSHIELD BRACKET



x1 SPINNING+MAF BOSS

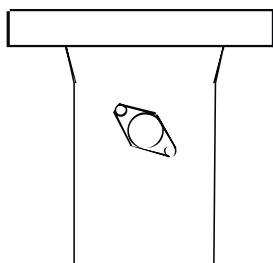

x1 80mm 15° SILICONE HOSE

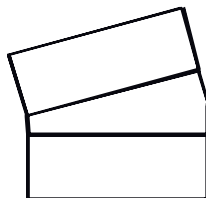

x1 150-170mm JUBILEE



x2 M6 WASHER



x2 M6x16mm CAPHEAD



x2 70-90mm HOSE CLAMP



x1 M6 NYLOCK NUT



STEP 1

Remove front two screws securing the air duct



STEP 2

Release the duct from the three airbox pins, one is located at the front and two either side



STEP 3

Carefully pull the rubber ducting upwards to release the fixings



STEP 4

Unplug the MAF sensor, gently press down on the clip to release



STEP 5

Unclip the MAF sensor wiring from the airbox



STEP 6

Unscrew & remove the MAF sensor from the airbox




STEP 7

Undo the jubilee clamp on the intake hose where it connects to the plastic elbow




STEP 8

Unbolt the airbox from the two fixing points

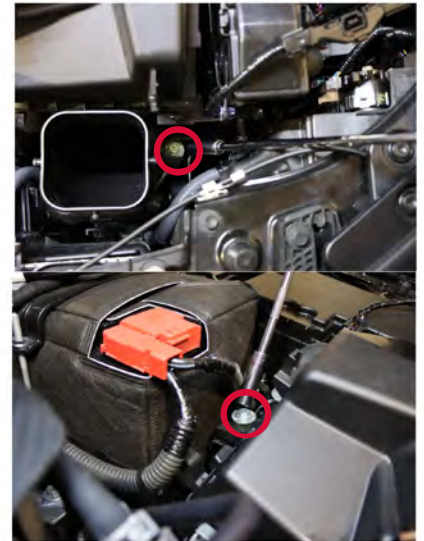

STEP 9

Remove intake hose from the plastic elbow and lift out the airbox

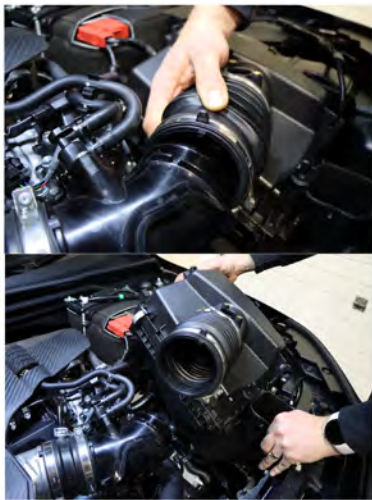

STEP 10

Move the MAF cable out of the way to the right hand side of the engine bay



STEP 11

Fasten the heatshield bracket by hand to the OE airbox mount




STEP 12

Lower the heatshield into the engine bay, loosely fix the heatshield to the bracket



STEP 13

Using the original bolts from the air duct, bolt the front of the heatshield down

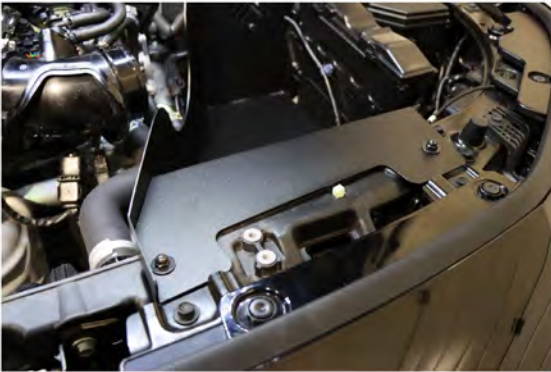

STEP 14

Install the MAF sensor to the spinning using the original screws



STEP 15

Install the silicone hose to OE intake pipe. The hose should point slightly downwards and be roughly parallel to the ECU opposite.



STEP 16

Install the spinning, tighten both jubilee clamps & plug in the MAF sensor



STEP 17

Fit the filter with jubilee clamp & tighten



STEP 18

Tighten all bolts and clip the MAF sensor wiring on to the heatshield bracket tab

